

# KLOPFENSTEIN PROFESSIONAL EASEL MODEL PE100 ASSEMBLY & MAINTENANCE INSTRUCTIONS

Remove all plastic wrap. Make sure you **find and save the 2 steel lever handles** which are packed with your easel. They will either be wrapped onto the easel in a cloth bag, or, for larger quantity orders, they will be bulk packed in a small carton inside one of the easel cartons.

**Step 1:** Attach the 2 leg braces to the back leg with the bolt and self-locking nut you'll find attached to the back leg tab. Tighten the nut with a wrench, but not so tight that it makes it hard to open & close the back leg.

**Step 2:** Screw in a steel lever handle at each location as shown below.

**Your easel is ready to use.** To raise and lower the canvas tray simply depress the trigger underneath the tray and release trigger to automatically lock tray into place. The trigger works easiest if you lift slightly on the tray as you depress the trigger. **We recommend an occasional wiping down of the unpainted center upright tube with a rag or paper towel sprayed with WD-40 lubricant. This is the only maintenance that should ever be needed.**




2

Screw in steel lever handles.

1

Attach leg braces w/bolt & self-locking nut.

Tray height adjustment

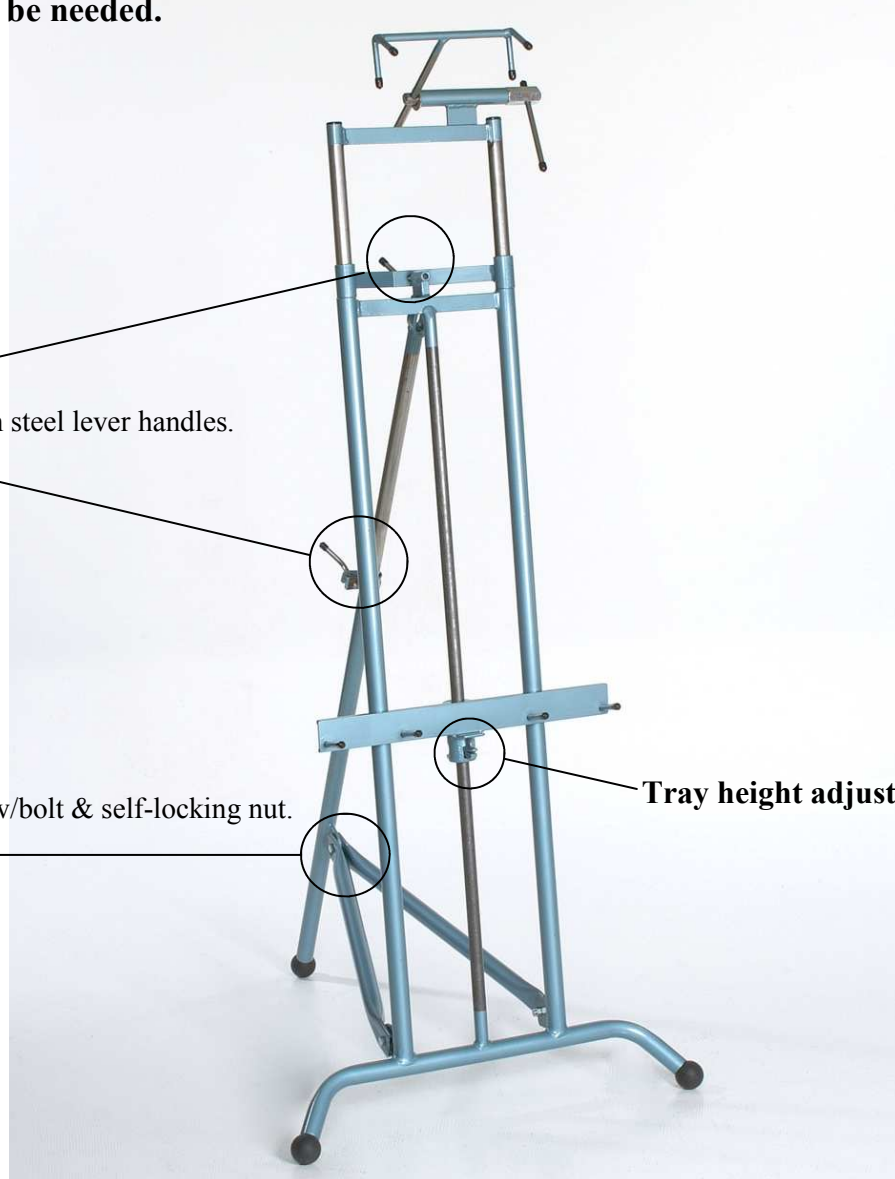

Need Help? Call us at 419-884-2900 with questions or comments.