


Safely Using The Klopfenstein-Built Challenge Easel (CH100)

CAUTION: Klopfenstein painting and drawing equipment is made from all welded, heavy gage steel tubing to provide exceptional durability and rigid stability for studio work. Our equipment is heavier than similar sized wood equipment and you must therefore take care to hold & control the telescoping & sliding parts of our equipment securely when making adjustments. *Failure to control these parts could cause personal injury and / or damage to your equipment.*

ATTN: ART PROFESSIONALS & STUDENTS Prevent personal injury. Carefully read and follow all safety procedures shown in this guide for safely working with this equipment.

ANATOMY OF A CH100 EASEL

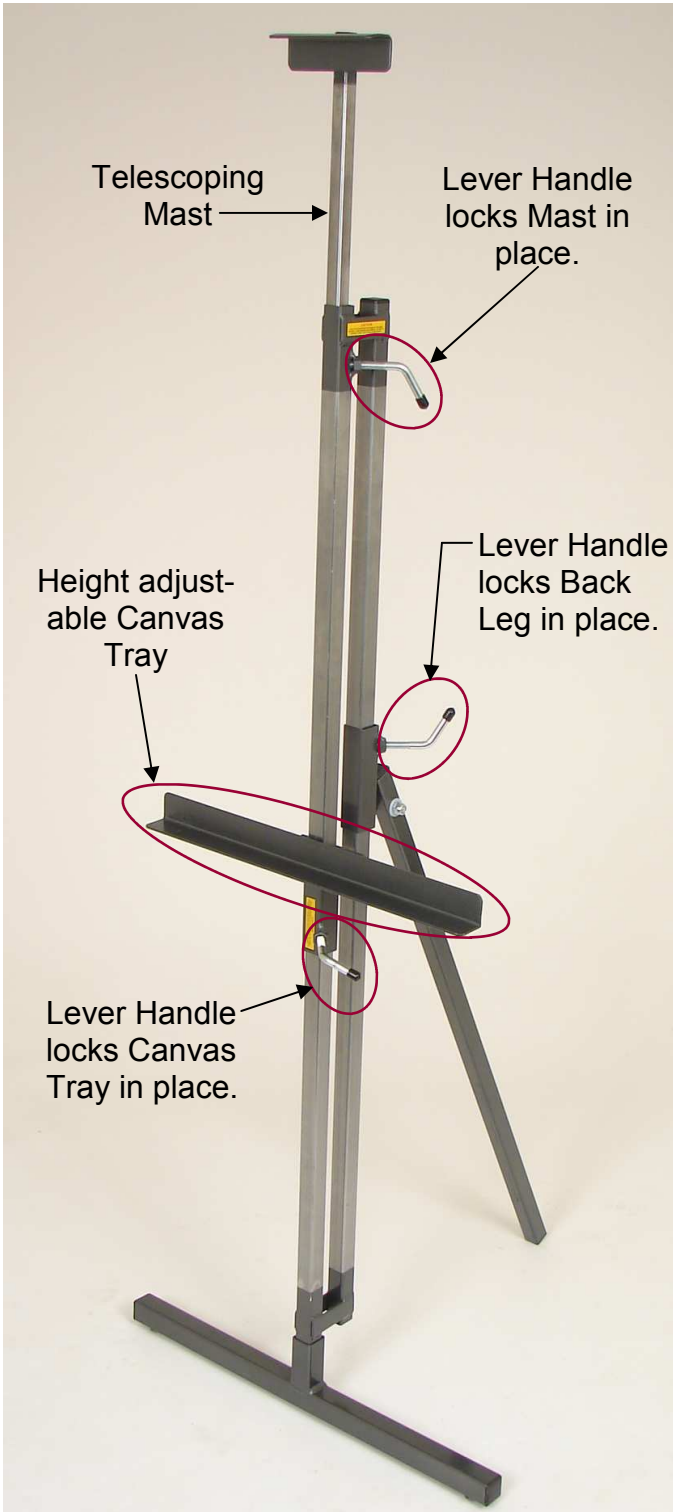

043010

SAFELY ADJUSTING MAST HEIGHT

1) Hold the *telescoping section* of the mast **before** loosening the lever handle.

2) Holding the mast with one hand, loosen the lever handle, adjust the mast height and re-tighten the lever handle.

ALWAYS: lower the mast to its resting position at the end of each painting / drawing session.

ALWAYS: support the mast with one hand **before** making any height adjustments.

ALWAYS: re-tighten the lever handle(s) after **every** easel adjustment.



SAFELY ADJUSTING TILT ANGLE

1) Hold & support the easel **before** loosening the back leg Lever Handle.

2) Holding the easel with one hand, loosen the back leg Lever Handle, adjust the tilt angle and re-tighten the back leg Lever Handle.

ALWAYS: support the easel with one hand **before** making any tilt adjustments.

ALWAYS: support the Canvas Tray **before** making any height adjustments.

ALWAYS: re-tighten the lever handle(s) after **every** easel adjustment.

